
DRF4432D20
20dBm ISM RF Transceiver Module

V1.32

Features

- GFSK transceiver Module
- ISM frequency bands
- 19.2K bps data rate
- Multiple channels
- 20dBm Max. output power
- Baud rate configurable
- 256 bytes data buffer
- Standby current < 3uA
- Supply voltage 3.4~5.5V

Application

- Home automation
- Security alarm
- Telemetry
- Automatic meter reading
- Contactless access
- Wireless data logger
- Remote motor control
- Wireless sensor network

DESCRIPTION

DRF4432D20 is a low-cost sub-1 GHz transceiver module designed for operations in the unlicensed ISM (Industrial Scientific Medical) and LPRD bands. GFSK (Frequency Shift Keying) modulation/demodulation, multi-channel operation, high bandwidth efficiency and anti-blocking performance make DRF4432D20 modules easy to realize the robust and reliable wireless link.

The module can be configured to work in different channels with 200k Hz space. It adopts high efficient looped interleaving EDAC (Error Detection and correction) coding with coding gain up to 3dB which keeps in advance in EDAC and coding efficiency over normal FEC (Forward Error Correction). Because of its high reliability in correction, modules can filter error and fake information automatically and realize truly transparent wireless link, which makes DRF4432D20 very suitable in the rigid communication environment.

DRF4432D20 integrates 256 bytes buffer. When the buffer is empty, users can transfer 256 bytes data per time and even limitless data transfer can be achieved as long as RF data rate (RF module to RF module) is configured to be faster than UART data rate (MCU to RF module). The module provides standard UART/TTL interface for selection. Users can choose seven data rates and three parity checks which make DRF4432D20 possibly tailor-made for different applications.

DRF4432D20 operates at 3.4~5.5V with extra low standby current which makes it suitable for battery powered-up applications.

PIN FUNCTIONS

PIN	Name	Function	Description
1	GND	Ground	Ground (0V)
2	VCC	Power	Power supply
3	/ EN	Input	Enable pin ($\cong 0.5$): work mode; ($\cong 2.0V$): sleep mode
4	RXD	Input	UART input, TTL level
5	TXD	Output	UART output, TTL level
6	AUX	Output	Data In/Out indication
7	SET	Input	Data / Field strength pin
8	NC	---	No connection
9	NC	---	No connection

Table 1 DRF4432D20 Pin Functions

ELECTRICAL SPECIFICATIONS

Symbol	Parameter (condition)	Min.	Typ.	Max.	Units
VCC	Supply Voltage	3.4		5.5	V
Temp	Operating temperature range	-30	25	85	°C
RH	Operating relative humidity	10		90	%
Freq	Frequency range	410 860 905		440 875 925	MHz
F _{DEV}	Modulation deviation		36		KHz
Mod	Modulation type		GFSK		
I _{DD_R}	Current in receive mode		20 20 20		mA
I _{DD_T} ⁽¹⁾	Current in transmit mode			100 100 100	mA
I _{DD_S}	Current in sleep mode.		3 3 3		uA
P _{out}	Output power			20 20 20	dBm

Sen. ⁽²⁾	Receive sensitivity @ 433Mhz @ 868Mhz @ 915Mhz		-121 -115 -115		dBm
DRFSK	GFSK data rate	1.2		19.2	Kbps
DRIN	Interface data rate	1.2		57.6	Kbps
TE	Evoking time from Sleep to Normal			20	uS
CHBW	Channel spacing		200		kHz
ZANT	Antenna Impedance		50		Ohm

Table 2 DRF4432D20 Electrical Specifications

Notes:

- (1) Transmit current is tested at the Max. output power.
- (2) Sensitivity is measured at 4.8k bps data rate.

ABSOLUTE MAXIMUM RATINGS

Symbol	Parameter	Min.	Max.	Units
VCC	Supply Voltage	-0.3	5.5	V
VI	Input voltage	-0.3	VCC+0.3	V
VO	Output voltage	-0.3	VCC+0.3	V
TST	Storage temperature	-55	125	°C

Table 3 DRF4432D20 Maximum Ratings

SETTING PARAMETERS

1. Default Values

Parameter	Option	Default Value	Unit
MCU data rate	1.2, 2.4, 4.8, 9.6, 19.2, 38.4, 57.6	9.6	Kbps
Parity Check	No check, Even parity, Odd parity	No check	
Frequency	418 ~ 455MHz	433.92	MHz
	860 ~ 875MHz	869	
	905 ~ 925MHz	915	
GFSK data rate	1.2,2.4, 4.8, 9.6, 19.2	9.6	Kbps
Output Power	0 ~ 7 levels	7 (20dBm)	

Table 4 DRF4432D20 Default Settings

2. Parameter Setting

Users can configure the parameters (frequency, data rate, output power, etc.) of RF modules by PC or MCU.

- ◆ **BY PC.** The interface of DRF4432D20 is UART/TTL. If connecting it to PC, users need to use a TTL-to-RS232 level converter to transform the different levels. Dorji Applied Technologies also provides converter board for configuration.

Firstly users need to insert module into converter board and connect converter board to PC by cable, then open DORJI RF software. After that the status column of tool should display “Found Device”. Users then can read/write the module. For more details, please check the operation manuals of converter boards on accessory page.

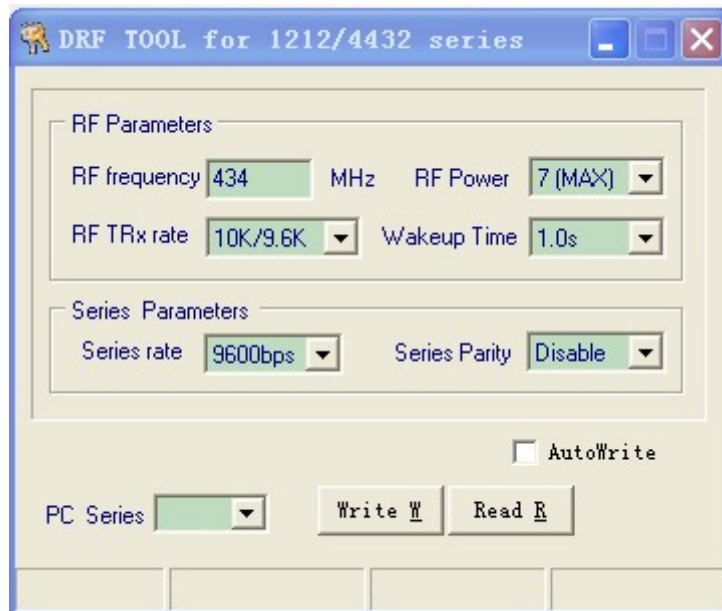


Figure 1: DORJI RF Tool

- ◆ **BY MCU.** The module can work normally after powering on for 50ms (T1) or more. When configuring the module, users need to switch the module to sleep mode (EN pin is high or floating) and monitor AUX pin. When AUX pin is high (no Receive or Transmit), the module will enter sleep mode in which the module can be configured after 20us (T2). When command is input to RXD pin, the module will be evoked. No matter what status of UART interface, the module will use 9600 bps (data rate) and no parity check as default format to communicate.

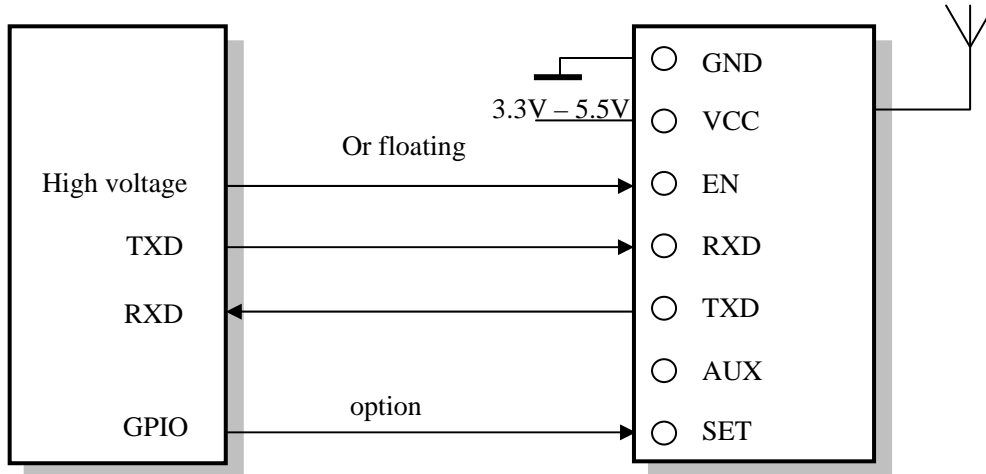


Figure 2: Connecting Diagram

When a command is sent to the module through the RXD pin, the module will send back response information by TXD pin in 50ms or less (T3) after it verifies the command is correct. The module then will be reset and initialized automatically and work with new settings after 100ms (T4). If the input command is incorrect, the module will make no response but it will still be reset and initialized. Users can take this advantage to wake up modules in long-term sleep or reset the modules.

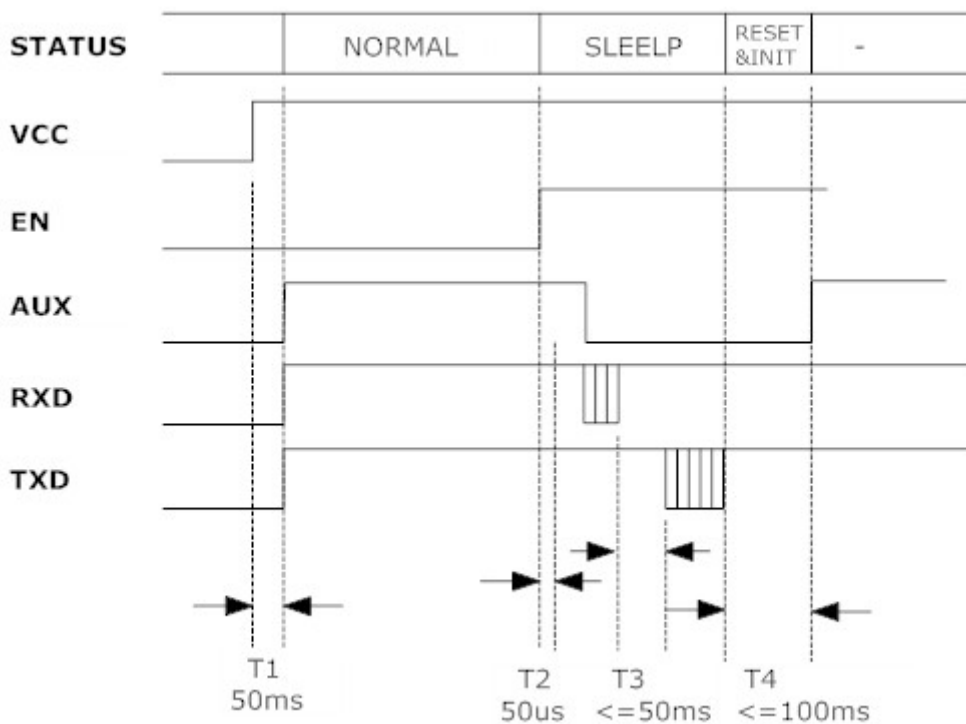


Figure 3: Timing Sequence for Setting Parameters

The commands of DRF4432D20 are HEX coding. The default configuring data rate is 9600 bps and no parity check included. The command set include two commands: Read command and Write command.

Read command: 0xFF,0x56,0xAE,0x35,0xA9,0x55,0xF0

Response: 0x24,0x24,0x24+Freq+DR_{FSK}+P_{OUT}+DR_{IN}+Parity

Write command: 0xFF,0x56,0xAE,0x35,0xA9,0x55,0x90+Freq+ DR_{FSK} + P_{OUT} + DR_{IN} +Parity

Response: 0x24,0x24,0x24+Freq+DR_{FSK}+P_{OUT}+DR_{IN}+Parity

Parameter	Unit	Length (Byte)	Explanation
Freq.	KHz	3	433920KHz = 0x06, 0x9F, 0x00
DR _{FSK}	Kbps	1	1, 2, 5,10, 20, 40 equals to 0x00,0x01,0x02,0x03,0x04,0x05
P _{OUT}	dB	1	From 0 to 7 represents 0x00 to 0x07. One increment increases 3dBm. “0x07” equals to the Max. output power (20dBm).
DR _{IN}	Kbps	1	1.2, 2.4, 4.8, 9.6, 19.2, 38.4, 57.6 equals to 0x00,0x01,0x02,0x03,0x04,0x05,0x06
Parity		1	0x00: No parity; 0x01: Even parity; 0x02: Odd parity

Table 5 DRF4432D20 Parameter Coding

E.g. If the user wants to set the module work at Freq (433.92MHz), DR_{FSK} (10K bps), P_{OUT} (20 dBm), DR_{IN} (9.6k bps) and Parity (no parity), the command could be written as below:

Write Command: 0xFF,0x56,0xAE,0x35,0xA9,0x55,0x90,0x06,0x9F,0x00,0x03, 0x07,0x03, 0x00

Response: 0x24,0x24,0x24,0x06,0x9F,0x00,0x03,0x07,0x03,0x00

When the SET pin is in logic high, the module will work in normal mode. If it is set to logic low, the module will not output data but present field strength. The format is fixed 0xff+0xff+0xff+field strength value (one byte).

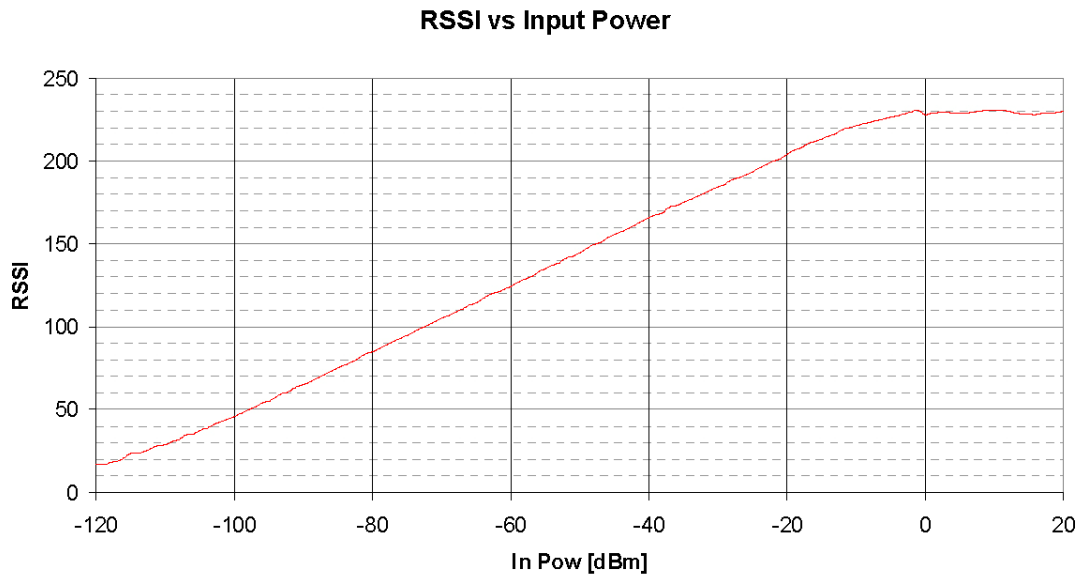


Figure 4: RSSI Value vs Input Power

The sleep mode of DRF4432D20 is switched through software. In Receive or Transmit mode, the module only can enter into sleep mode after one Receive or Transmit is finished. Users can take full use of this character. In other word sleep mode can be set in advance by setting EN pin to logic high before one Receive or Transmit finishes because the module will detect EN pin automatically after one Receive or Transmit process ends. Users can inquiry the status of AUX pin to judge if data is received or sent successfully.

MECHANICAL DATA

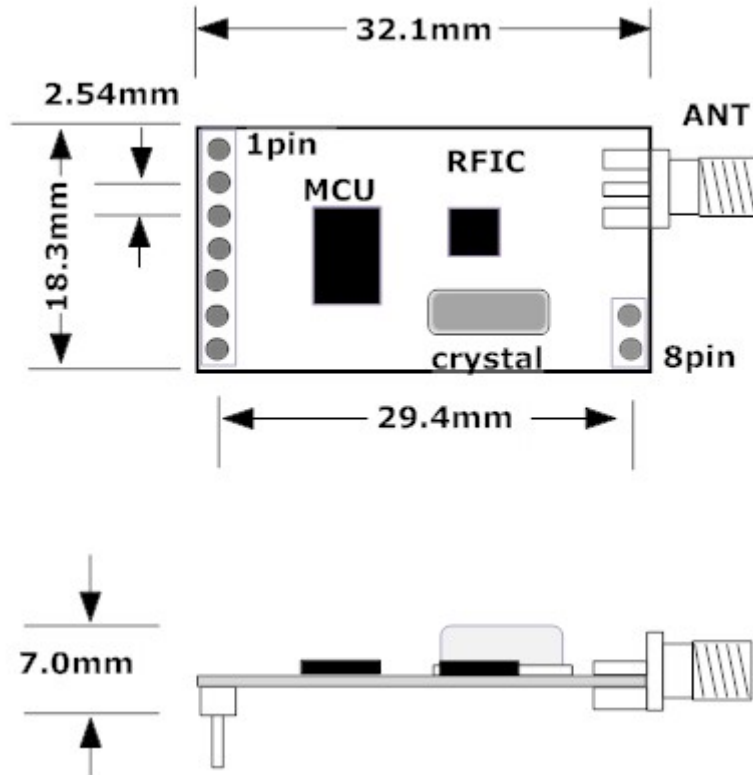


Figure 5: Mechanical Dimension

ORDERING INFORMATION

DRF 4432 D 20 — 043 A

- ① ② ③ ④ ⑤ ⑥

Num	Symbol	Meaning
①	RF module	RF GFSK module
②	IC Type	SI4432
③	Module Function	Data transmission
④	Power	20dBm output power
⑤	Freq. Band	043: 433MHz 086:869Mhz 091:915Mhz
⑥	Package	DIP package with SMA connector

Table 6 Ordering Information

<p>Dorji Applied Technologies A division of <i>Dorji Industrial Group Co., Ltd</i></p> <p>Add.: Xinchenuayuan 2, Dalangnanlu, Longhua, Baoan district, Shenzhen, China 518109</p> <p>Tel: 0086-755-28156122 Fax.: 0086-755-28156133 Email: sales@dorji.com Web: http://www.dorji.com</p>	<p>Dorji Industrial Group Co., Ltd reserves the right to make corrections, modifications, improvements and other changes to its products and services at any time and to discontinue any product or service without notice. Customers are expected to visit websites for getting newest product information before placing orders.</p> <p>These products are not designed for use in life support appliances, devices or other products where malfunction of these products might result in personal injury. Customers using these products in such applications do so at their own risk and agree to fully indemnify Dorji Industrial Group for any damages resulting from improper use.</p>
--	---